


PSYCHIC MEDIUMBOARD & MAXIBOARD

INSTRUCTIONS FOR ANDROID DEVICES ONLY

Medium Whiteboard & Chalkboard:

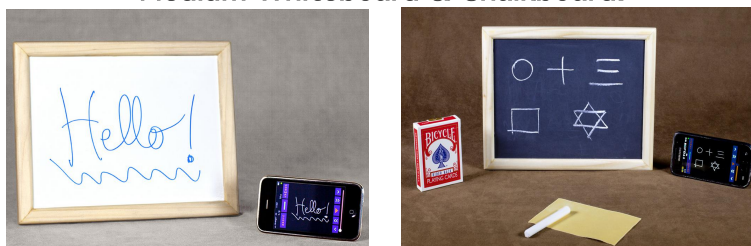

Maxi Whiteboard & Chalkboard:



We are glad to count you among the owners of the Psychic Board (Medium or Maxi)!

Before using your Psychic Board, please take time to read all the instructions. They are very easy but each step has to be followed precisely.

If certain elements are not clear, do not hesitate to email us at info@magikdata.com


CONTENTS

1	INVENTORY OF THE RECEIVED ELEMENTS	2
2	OPERATING METHODS OF THE BOARD.....	3
	① ON/OFF magnetic switch	
	② Inserting the battery	
	③ General battery information	
	④ Tips and recommendations	
3	DOWNLOAD OF THE APP.....	8
4	APP SETUP.....	8
5	INSTRUCTION MANUAL FOR THE APP.....	11
	① Button diagram	
	② SINGLE mode features	
	③ MULTIPLE mode features	
	④ Options	

1

INVENTORY OF THE RECEIVED ELEMENTS

First, make sure that you have received all of the parts, depending on which Board you ordered:

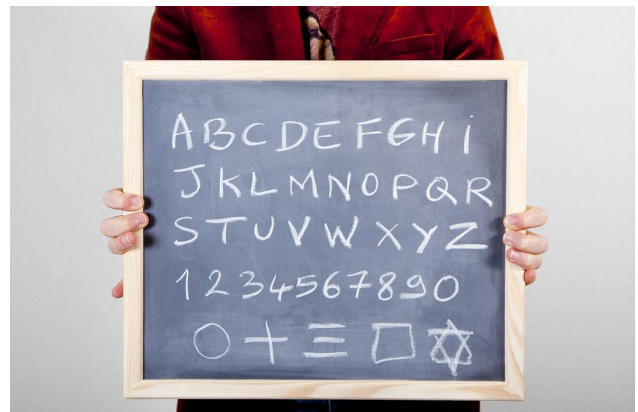

Whiteboard:

- The Mediumboard or Maxiboard
- 1 battery
- 1 elastic band (with magnet)
- 2 dry erase markers
- 1 eraser
- 1 charger
- 1 EU, UK or US adapter (if applicable)

Chalkboard:

- The Mediumboard or Maxiboard
- 1 battery
- 1 elastic band (with magnet)
- 1 box of chalk
- 1 eraser
- 1 sponge towel
- 1 charger
- 1 EU, UK or AU adapter (if applicable)

Note: For the most authentic result possible, we add a patina to our Chalkboards. We use an adhesive veneer that after many uses mimics a true chalkboard. For the audience, it has to be a simple chalkboard with no particular value.

2 OPERATING METHODS OF THE BOARD


Note: In order to make the instructions as clear as possible, we describe only one type of Board below. Although the Medium Whiteboard is the only one photographed, everything is identical for the three other Boards.

① ON/OFF magnetic switch

Before learning how to insert the battery in the Board, here are a few words about the ON/OFF magnetic switch.

a) How to TURN OFF the Board:

Place the elastic band with the magnet over the pinhole in the frame.

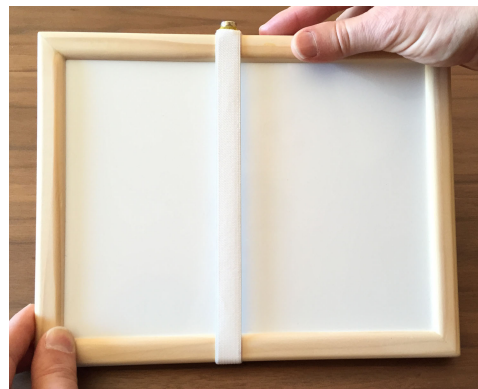

b) How to TURN ON the Board:



Remove the magnet (the elastic band on which the magnet is glued). Use caution to reduce the risk of losing control of the elastic band when turning on/off the Board.



② Inserting the battery

Now that you know how to use the magnetic switch, let's see how to insert the battery in the Board.


- a) Take off the elastic band and **turn the Board upside down**.
- b) **Put a thin blade (or plastic card)** between the wooden frame and the back panel. Choose the side where you have the most space to insert the blade and lever up to loosen the back.

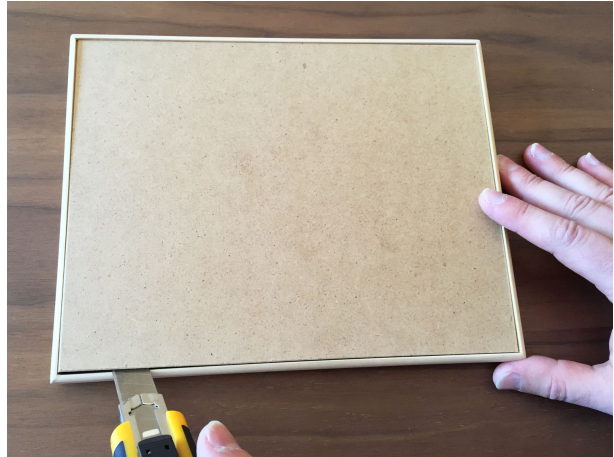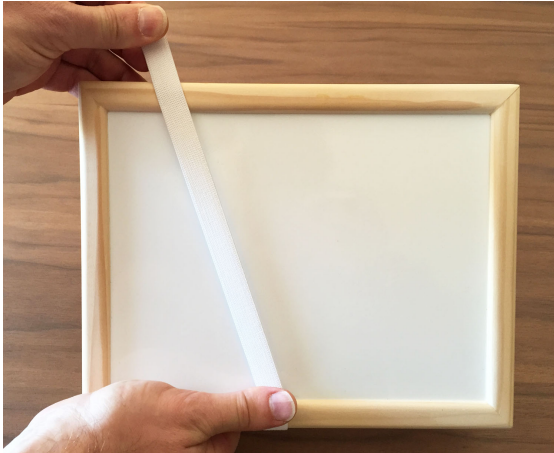


- c) **Carefully remove the back panel held by 4 magnets** (more for the Maxiboard).



- d) The electronic board is in front of you. **Do NOT touch the components with your fingers!** The battery has 3 contact panels. Place the battery such that the contact panels are touching the 3 contacts on the Board.

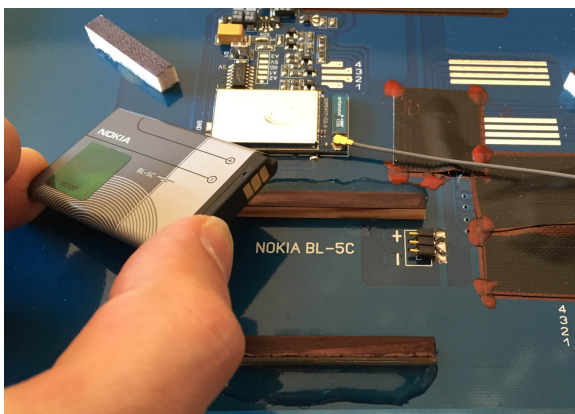

- e) **Because the back has a precise position, align the color-code dots** (green dot in front of green dot, etc.) Replace one edge of the back panel first and then slowly drop the other sides. It will stay in place thanks to the magnets.

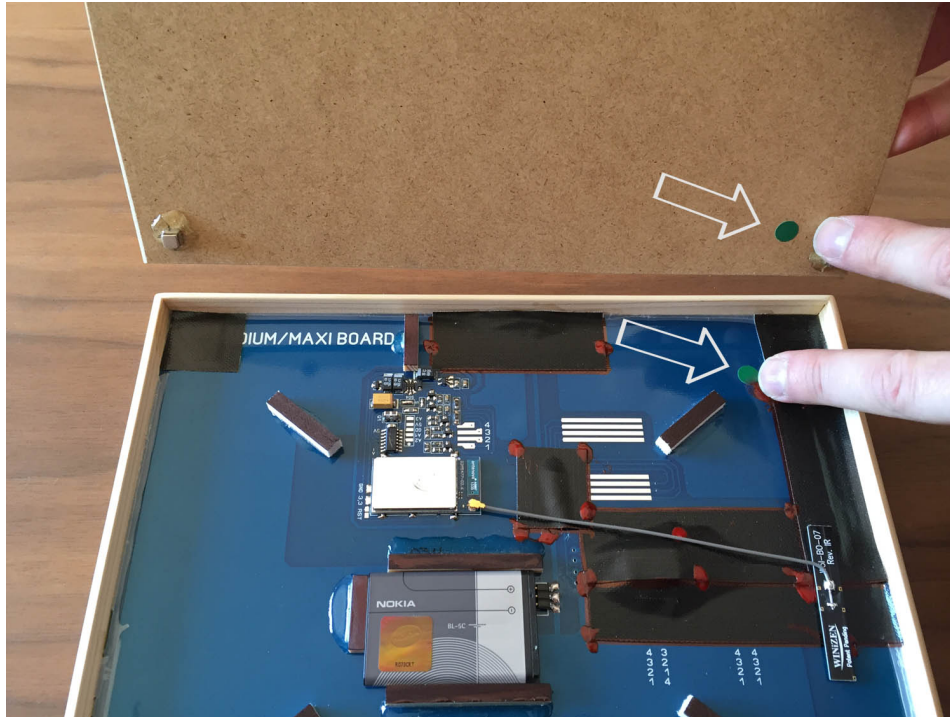


- f) **Your Board is ready to use!**




③ General battery information

- a) **Maximum charging time:** 2 hours. Do not charge the battery all night.
- b) **Life of the battery fully charged:** 4 to 5 hours depending on the intensity of use.
- c) **Which replacement batteries to purchase:** These are common inexpensive Nokia BL-5C batteries available on Amazon, for instance. **Remove the 2 plastic separations** between contact panels on new batteries before use:

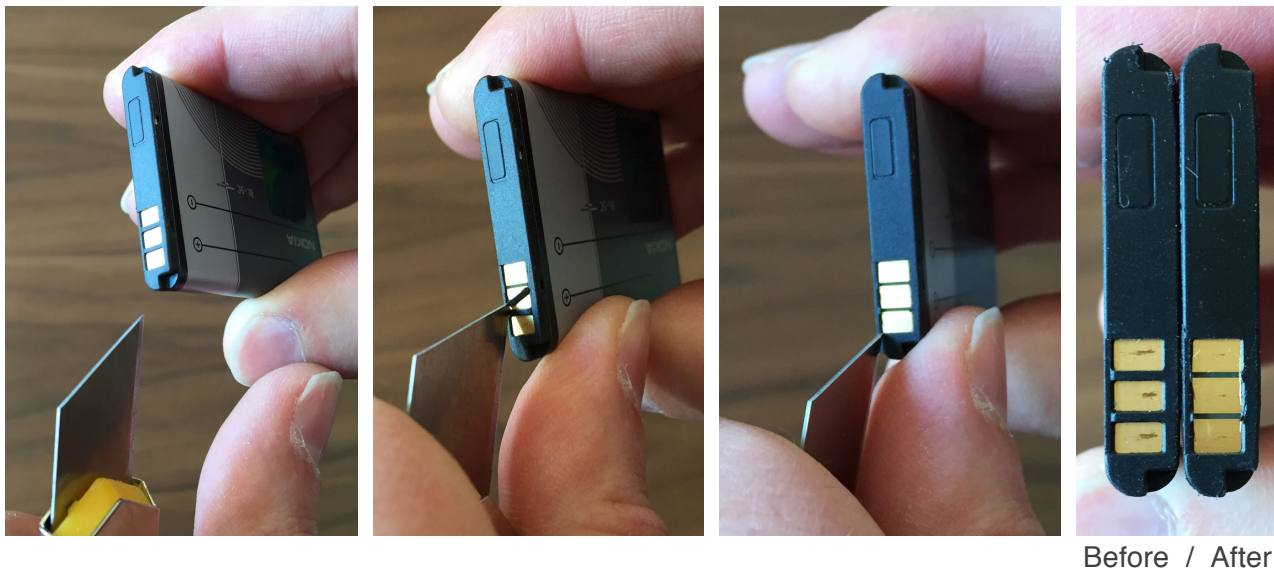

④ Tips and recommendations

- a) **How to hold the Board**

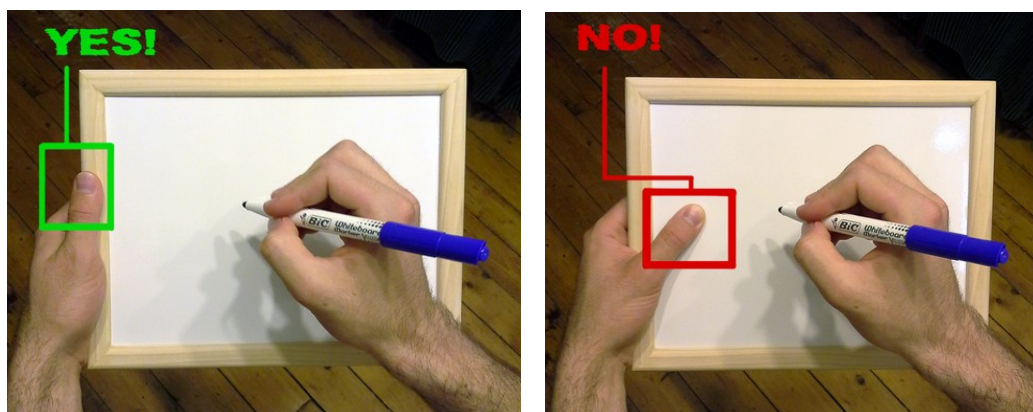

While you write or draw, do not press other fingers on the sensitive surface at the same time.


Here is just one idea of how to obtain this from your spectator:

- First ask them to draw **a large circle**.
- "This circle will allow you to concentrate your mind..."
- Then ask them to draw or write something **inside this circle**.
- Unconsciously they will not touch the surface to avoid erasing the circle with their hand!

For more tips, watch the exclusive videos of **Colin McLeod**, **Docc Hilford**, **Gerry McCambridge** and **Luc Langevin**.

Other good holding positions

With the Medium board:

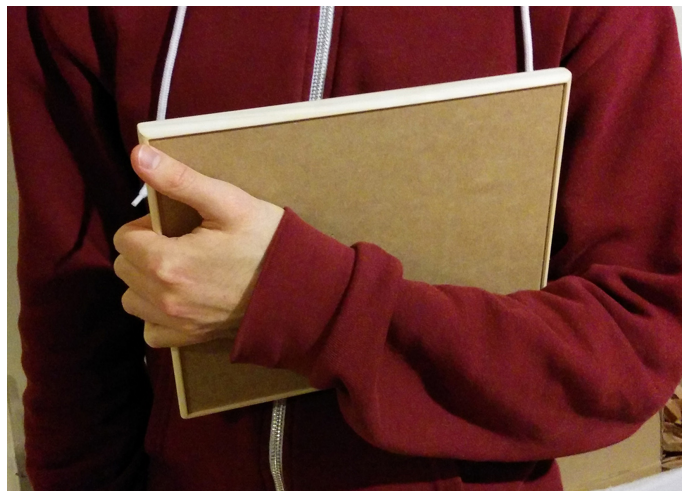


With the Maxiboard:



The Maxiboard, regarding of its size, is more practical performed on an easel (see Gerry McCambridge video for example).

b) How to prepare the piece of chalk (only for Chalkboards):

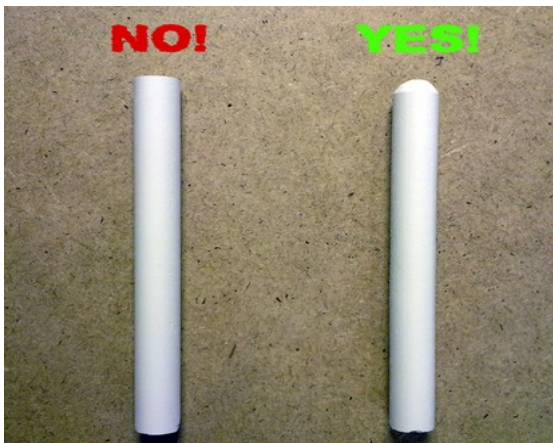

Both ends of the piece of chalk must be rounded in order not to deeply scratch the chalkboard surface. Accomplish this using sand paper or writing on another surface until ends are rounded.

Avoid buying chalk labeled “hard”. Soft or extra soft are better. We recommend Carrefour or Office depot.



However, it is normal to have some scratches on the surface even with a rounded piece of chalk. **A slightly moistened sponge will remove most debris.** No chemicals should be used to clean the surface.

c) Precautions of use:

Be careful not to hit or drop the board.

When you do not use the board, store it flat (horizontal), writing surface above. Do not store it upside down or vertical. Do not store it in a humid area.


If you put it in a case, make sure the board is not pressed too hard on the edges by foam or other material.

When you want to clean the surface of your Board, do NOT use any chemical products!


Black dry erase markers (for the Whiteboards) are sometimes more difficult to erase. Avoid black.

Remember, **you can also use your fingernail** but the pressure from your fingertip alone won't be enough.

d) Exclusive videos:

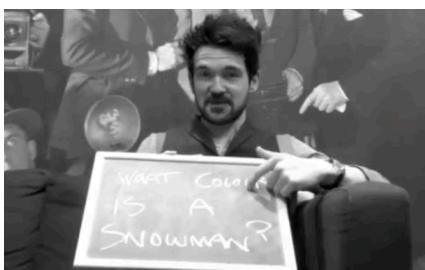

Colin McLeod

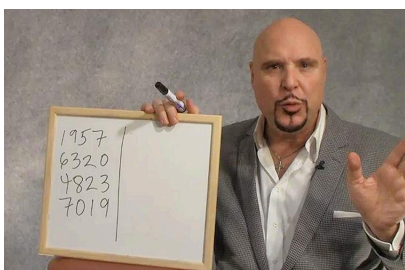

Docc Hilford



Gerry McCambridge

Colin McLeod, Docc Hilford and Gerry McCambridge spoil us!

They offer new ideas and suggestions about the Board in 3 exclusive videos. You can watch them here:

<http://www.magikdata.com/notices-us-medium-maxi-boards-white-chalk-for-apple-or-android.php>

3

DOWNLOAD OF THE APP

If you placed your order with a phone or the kit phone + watch, everything is already installed and ready to use, so please go directly page 11 (“Summary of the launch”)

If not done already, you must **download the app “PSYCHIC MINIBOARD”** (working with the Miniboard, Mediumboard and Maxiboard) directly onto your smartphone or tablet. Search “Magikdata” on:



Google Play



The Psychic Miniboard logo (careful, watch app logo is very similar!)

Do NOT open the app now!

Android device technical requirements:

At least Android OS 5.5.

Standard brands: Samsung, LG, Motorola, Sony etc.

Note 1: We charge a manageable fee for our apps to limit the visibility of curious consumers who have not purchased one of our products.

Note 2: A separate app is required for electronic watches. For more information about how to download and set up the “Watch BOARDS” app, go here (you don’t need this link if you already ordered the kit phone + watch):

<http://magikdata.com/catalogue-us-applications-for-android-wear-watch.html>

4


APP SETUP



If you placed your order with a phone or the kit phone + watch, everything is already installed and ready to use, so please go directly page 11 (“Summary of the launch”)

Leave the battery in the Board, and turn it off using the magnetic elastic (see chapter 2). Now, you can **pair the Board** to your Android phone or tablet:

- a) Go to “Settings” on your phone/tablet and **turn on Bluetooth**
- b) **Remove the magnetic elastic** of the Board to turn it on
- c) Tap “**Refresh**” (or “Scan” depending on your phone/tablet – see picture below) to make the Board signal appear. When available tap “MINIBOARD-XXXX”. If the signal can’t be found, restart your phone/tablet
- d) Click on the Bluetooth signal and **pair** by entering the **PIN code: 2255** and **wait for the pairing confirmation**

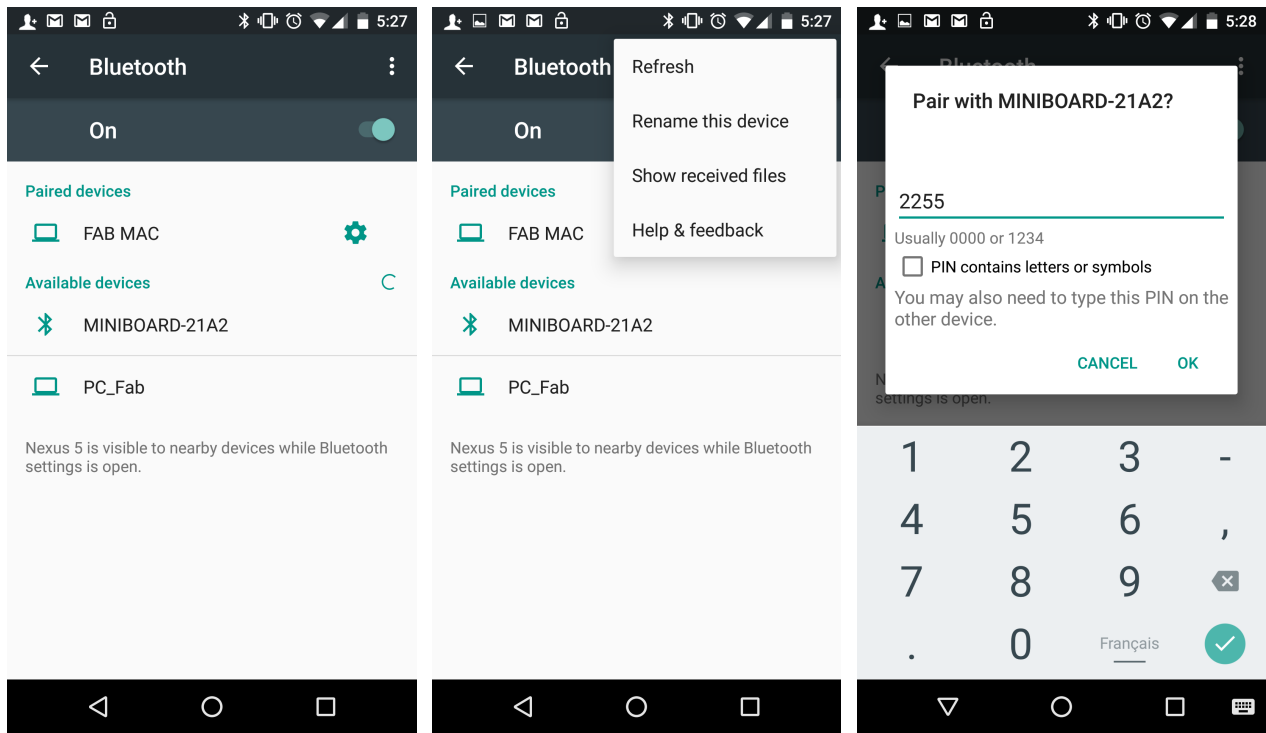


e) **Launch the app** previously downloaded

f) Once the app is open, **tap the menu button** and look for **“Connect a device”**. The **menu button varies from one Android device to another** (sometimes, you even have to maintain pressure on the button for 2 or 3 seconds):



g) Tap **“MINIBOARD-XXXX”**.

h) **A green square** replaces the red square in upper right corner. Your Board is now connected!

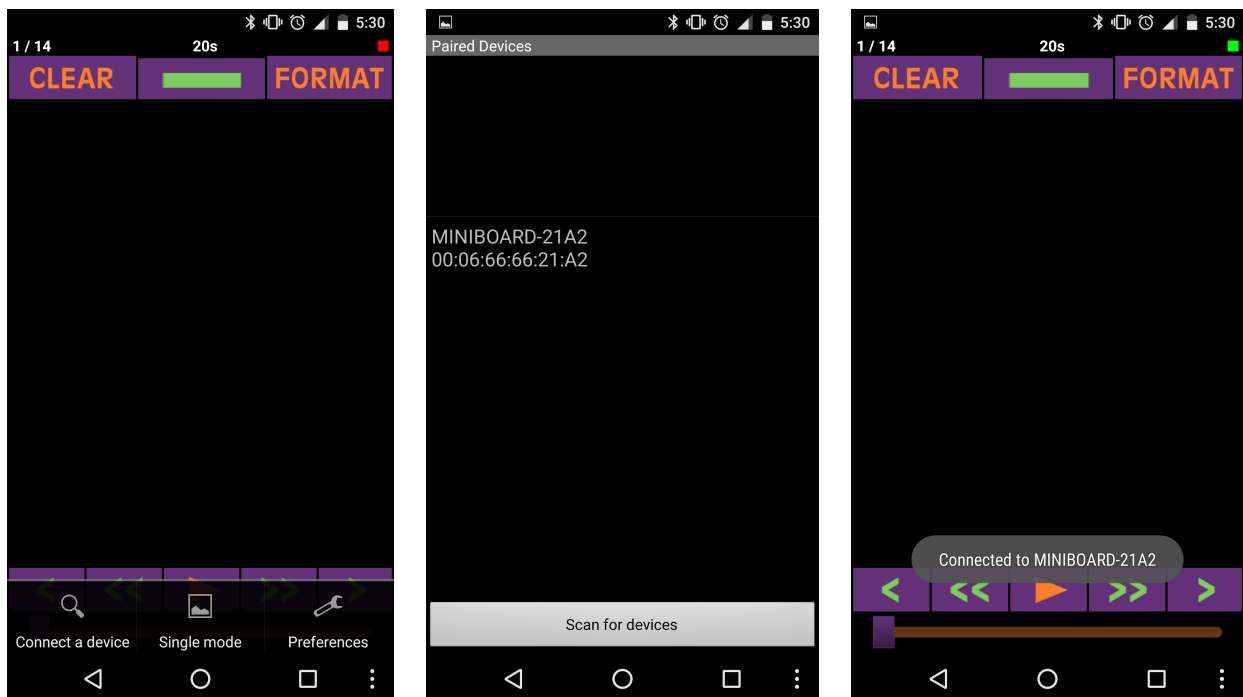

This pairing is done only one time. You will NOT have to go back to “settings” each time you use your Board.

Summary of the launch for all future uses:

- a) **Make sure the Bluetooth is on**
- b) **Turn on the Board** (by removing the elastic band — see chapter 2)
- c) **Launch the app**
- d) **The green square appears.** Your Board is now connected!


Summary of the shutdown:

- a) **Turn off the Board** by replacing the elastic band
- b) After a few seconds, **the green square turns red**
- c) **Quit the app** by pressing the back button of your device and confirm with “OK”
- d) Turn off the Bluetooth of your device (optional)

Note: Because of all the different Android devices available on the market, we suggest you refer to the manual of your smartphone or tablet in case of a divergence with our instructions.


5 INSTRUCTION MANUAL FOR THE APP

① Button diagram

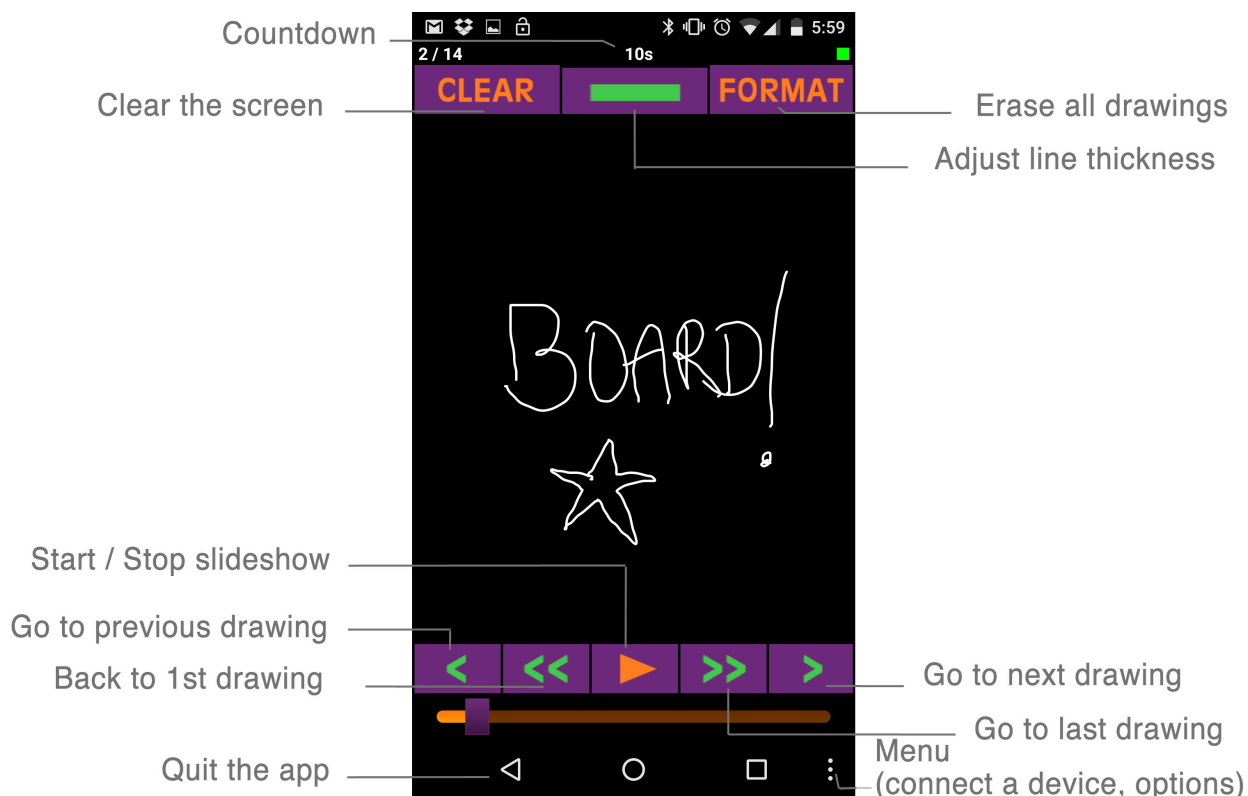

The app has 2 different modes:


- **SINGLE mode** shows only one drawing
- **MULTIPLE mode** allows you to save several drawings

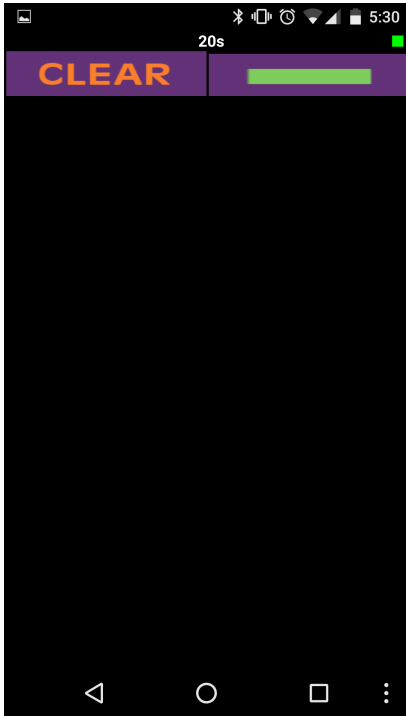


② SINGLE mode features:

The countdown starts as soon as you stop writing on the Board.
When the countdown is at zero, the drawing remains present.
As soon as you write again, the previous result is replaced by the new one and the countdown restarts.
Before zero, you can keep writing without clearing the drawing.

③ MULTIPLE mode features

The countdown starts as soon as you stop writing on the Board.
When the countdown is at zero the drawing is saved and you move directly onto the next drawing.
You can save the drawing before waiting for the end of the countdown by pressing on .
The number of drawings, and thus the number of spectators, increases automatically. Therefore, thousands of drawings can be saved.

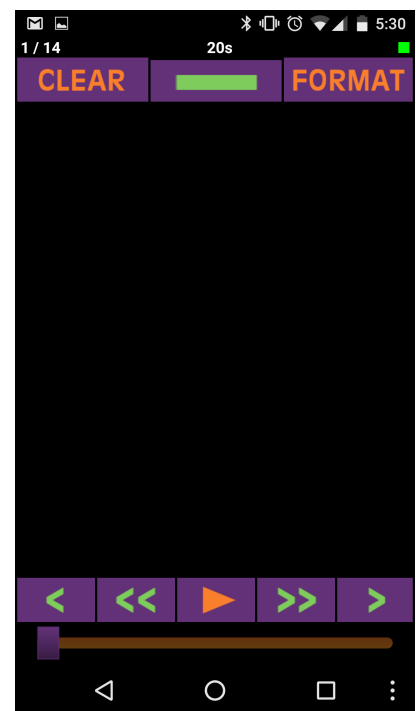

④ Options

Change modes by tapping “Single mode” or “Multiple mode”.
Click on “Preferences” to:

- Change the drawing countdown (Drawing delay)
- Change the slideshow countdown (Slideshow delay)
- Check/uncheck the automatic connection (we suggest that you always keep this option active)

